354840.0 - POW Control 4-6 - Trouble shooting Unplug all cables Connect user panel to MASTER box Connect power supply ONLY to MASTER box YES Check if all 3 LEDs of MASTER BOX are blinking? Additional connect power supply to SECONDARY box Unplug all cables Open MASTER box and check NO YES Check if all 3 LEDs of MASTER BOX if RF PCB is in place and are flashing with 1Hz period? Dip switches are set to: 1 = 0 (for X1 column, =1 for TV lifts) 2 = 1 (Master) Unplug all cables 3 = 0 Open SECONDARY box and check Assamble MASTER box again if the connection cable is in place Assamble SECONDARY box again Press DOWN button of user panel MASTER and SECONDARY box generate clicking YES sound and all LEDs turn on shortly? Probably something is wrong Connect columns to MASTER and with the user panel SECONDARY box (OBS! There should be NO metal connection Contact your dealer for a between a column connected to MASTER replacement part. and SECONDARY box!) But it is ok to have a metal frame connection between the columns connected to one box) Press DOWN button on user panel to move all columns down Keep pressing down for 2sec more until MASTER/SECONDARY box releases by itself Press UP button to move upwards. OBS! Observe desk frame! YES Are all LEDs (where a column is connected) NO ON and are not blinking? Unplug and connect again the cable between YES NO

Is everything working as expected?

Problem solved!

Contact your dealer for

further help!

column and control box